


Cat.6 180° Tool Free Shielded KJ




Installation Manual



- 1、Prepare C6 SFTP Solid Cable and use stripper to strip the cable jacket

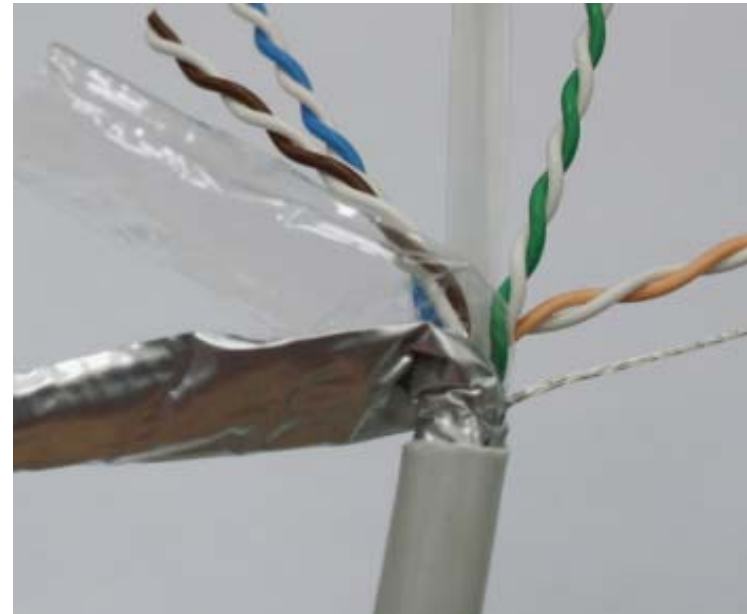

- 2. Cut off the cross bar, foil, plastic Mylar and reserve ground wire

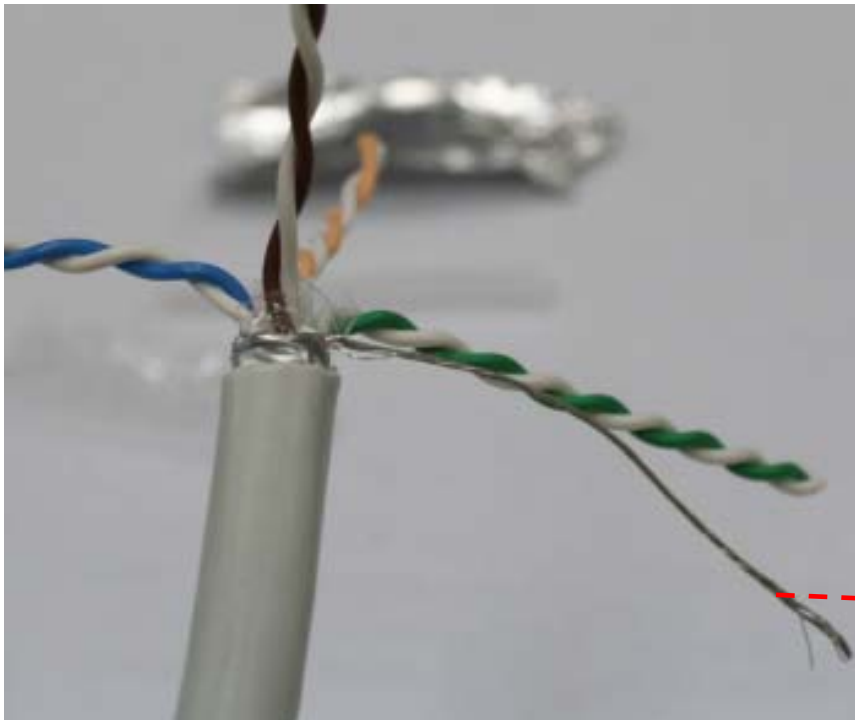




Ground Wire

- 3、Put the cable into KJ18F wiring management cap and pull down the ground wire





Wiring management cap

- 4 、 Arrange 4 pairs wire on wiring management cap and cut the extra wires.

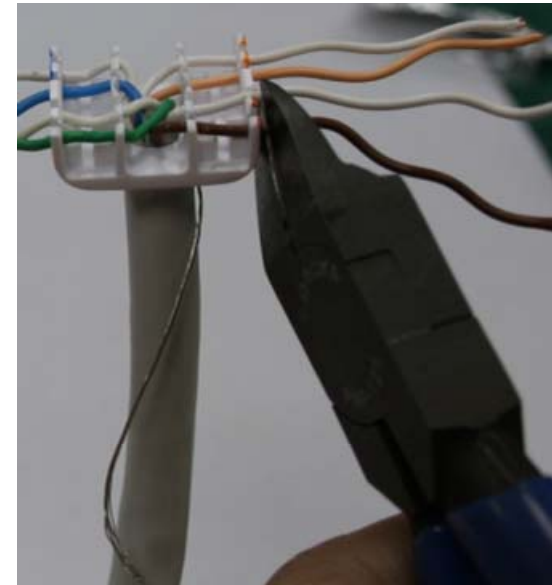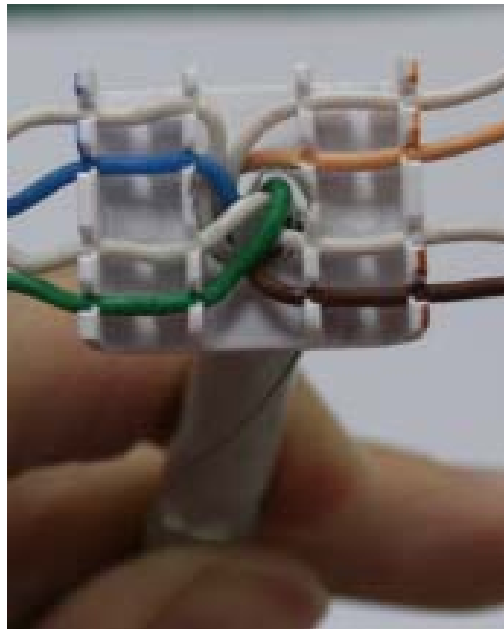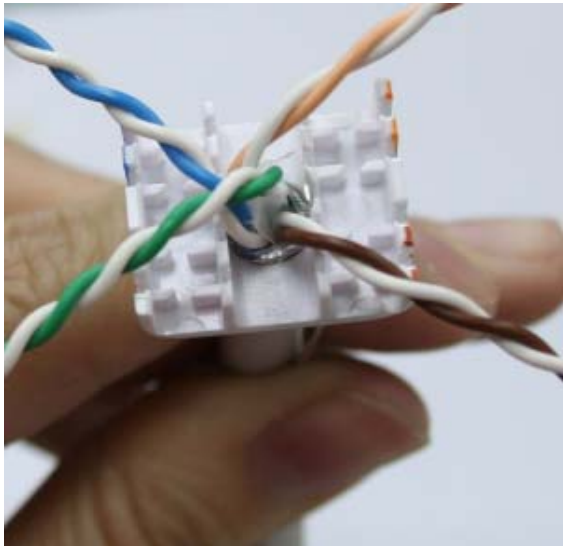


- 5 、 There's a smart design on wiring management cap and terminal block to help precise installation.

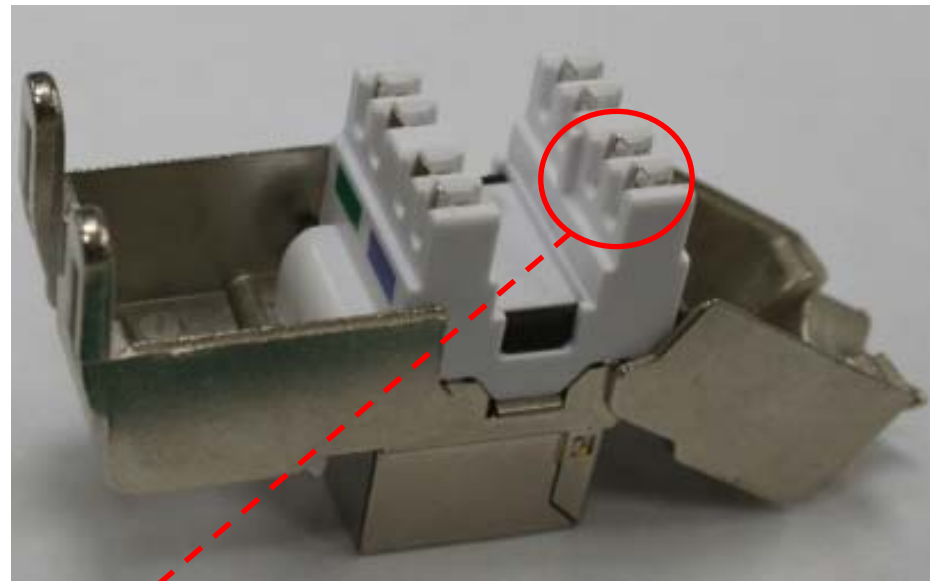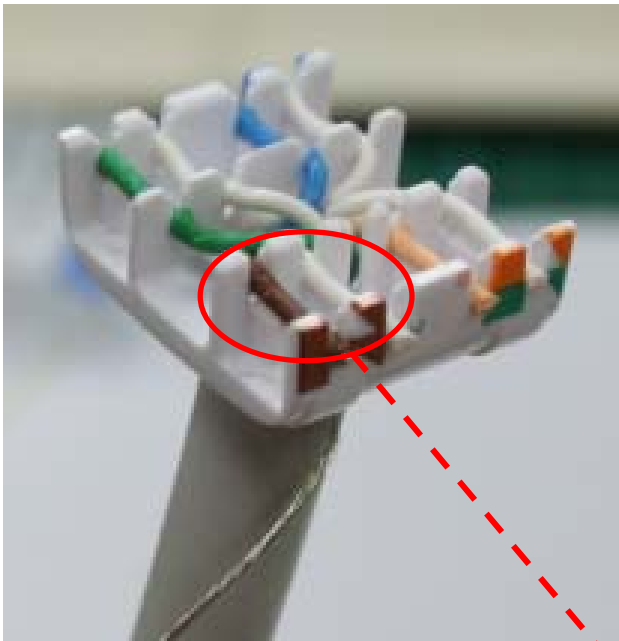

Smart design


Mini6

- 6 、 Push the wiring management cap to terminal block and follow the direction by the color print.

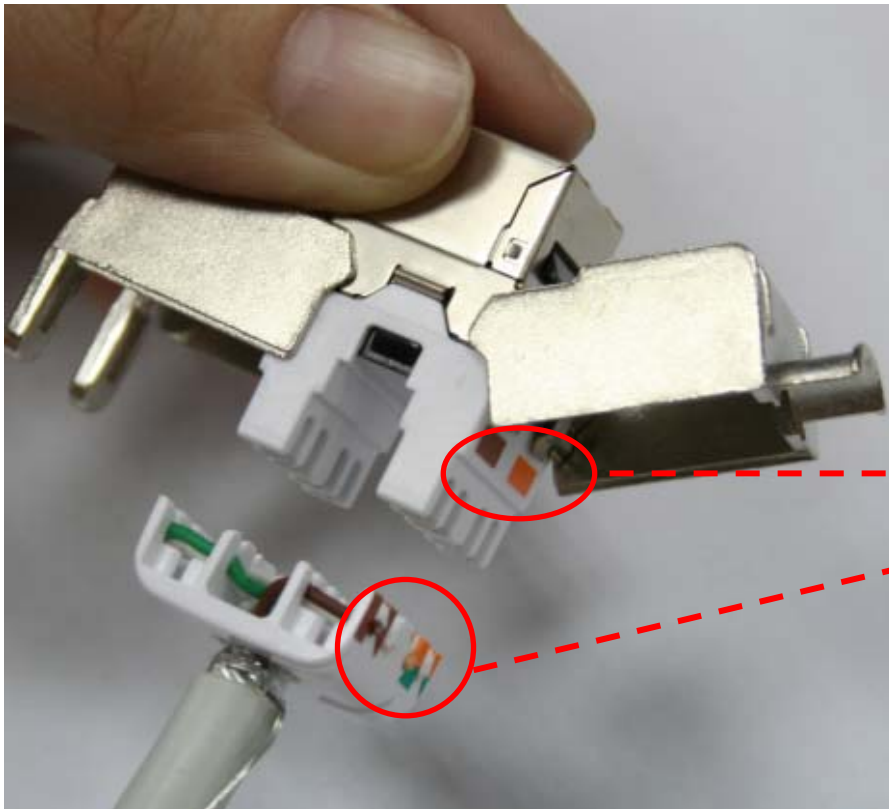


Check color print

- 7、Press the wiring management cap toward terminal block

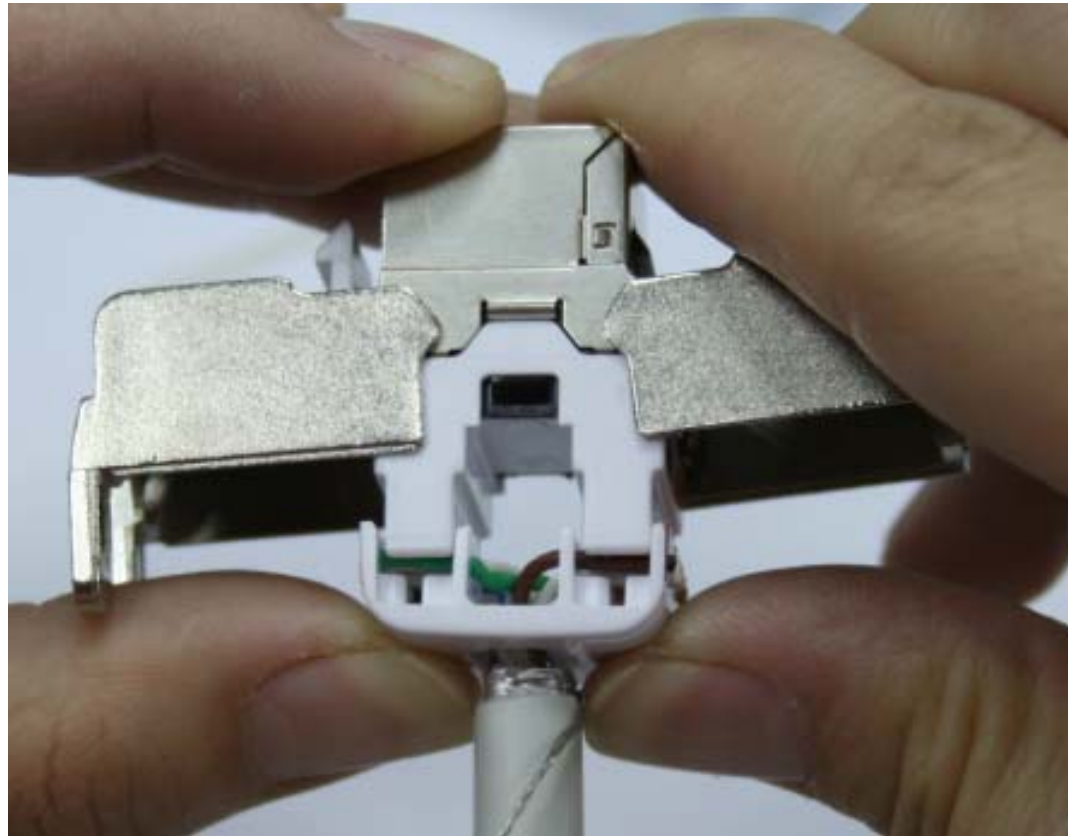

- 8 、 Snap in the support bar at both sides and press the force to contact terminal block.

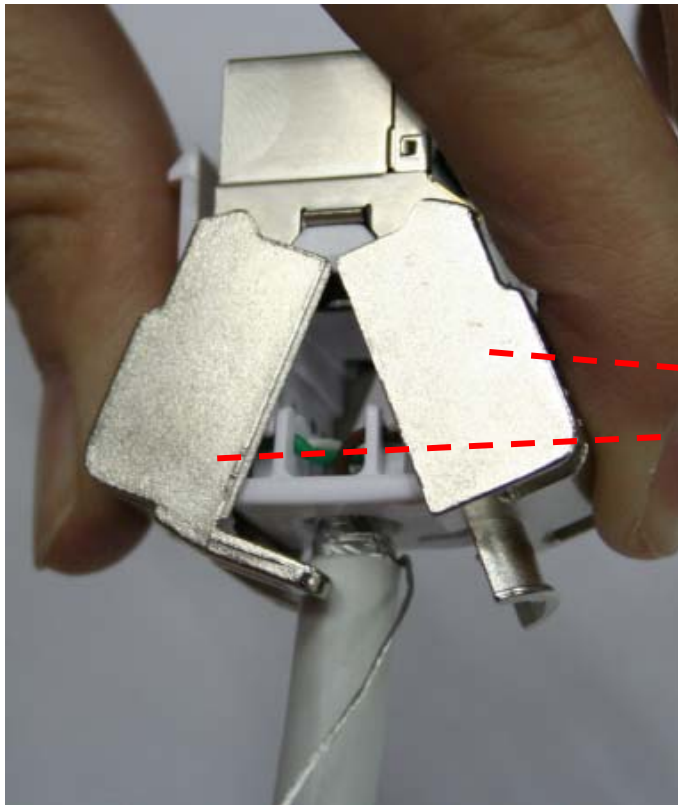

Support bar

- 9 、 Tie the ground wire on cable holder



Cable Holder



- 10 、 Use the cable tie to tighten the ground wire and cut the extra cable tie, then finish the installation.



THANKS~